

OPERATING INSTRUCTIONS

RHINO R-600 AND R-900 MAGNETIC SWEEPER

TO OPERATE YOUR **RHINO MAGNETIC SWEEPER**, SIMPLY PUSH IT OVER THE AREA TO BE CLEANED, AT A BRISK WALKING PACE, AND IT WILL PICK UP ANY FERROUS MATERIAL OVER WHICH IT PASSES.

WHEN THE MAGNETS HAVE COLLECTED A LOT OF WASTE, THEY BECOME LESS EFFICIENT, SO CLEAR THEM REGULARLY BY PULLING THE LEVER 'R'. THIS WILL DROP EVERYTHING THAT HAS BEEN COLLECTED, ONTO THE GROUND. MOVE THE SWEEPER AWAY FROM THE WASTE AND GENTLY LOWER THE LEVER.

BRUSH THE WASTE INTO THE COLLECTION TRAY AND EITHER DUMP IT, OR PUT THE TRAY BACK ON THE MACHINE AND CONTINUE SWEEPING. DO NOT SPEND TIME TRYING TO BRUSH UP EVERYTHING; COLLECT THE BULK OF THE WASTE AND PUSH THE SWEEPER BACK OVER WHAT IS LEFT.

IF REQUIRED, THE HEIGHT OF THE SWEEPER CAN BE RAISED OR LOWERED. HOLD THE FRONT OF THE SWEEPER AND LOOSED NUT 'X'. MOVE THE ADJUSTER SLIDE FORWARD TO RAISE THE MACHINE, AND BACKWARDS TO LOWER IT. WHEN AT THE REQUIRED HEIGHT, RE-TIGHTEN THE NUT. CARRY OUT THIS PROCEDURE TO BOTH SIDES

YOUR **RHINO MAGNETIC SWEEPER** WILL REQUIRE NO MAINTENANCE WHATSOEVER, AND THE MAGNETS WILL MAINTAIN THEIR STRENGTH FOR OVER 50 YEARS.

IF YOUR **RHINO MAGNETIC SWEEPER** HAS BEEN SUPPLIED WITH THE HANDLE LOOSE, PLEASE FOLLOW THESE INSTRUCTIONS WHEN FITTING:

1. REMOVE THE TOP SET OF NUTS AND WASHERS FROM THE BOLTS WHICH SECURE THE CASTOR. DO NOT REMOVE THE LOWER SET OF NUTS, BUT PLACE THE HANDLE FLANGE ON TOP OF THEM AND SECURE IT WITH THE NUTS AND WASHERS PREVIOUSLY REMOVED.
2. CONNECT RODS 'A' AND 'B', PLACING THE WASHER PROVIDED BETWEEN THEM. TIGHTEN NUT.
3. LIFT THE RELEASE HANDLE 'R' AND WHILST HOLDING IT, REMOVE PIN 'D'. LOWER THE RELEASE HANDLE AND THE SWEEPER IS NOW READY FOR USE.

